



12'x12' Garden Shed Plan

Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our premium edition:

Features	Free plan	Premium edition
Steps count	14	28
Illustrations for Each Step	S	S
Print Ready	S	S
Step By Step Instructions	S	S
Full Materials and Cuttings List	\otimes	S
Additional Illustrations	\otimes	S
Additional Blueprints	\otimes	S
Tools List	\otimes	
Fastening Elements List	\otimes	
Technical Support	\otimes	

BUY NOW

12'x12' Garden Shed Material List

Site Preparation

- Concrete
- Bricks

Bottom Frame

- Pressure-Treated Lumber
- Plywood

Wall Frames

• Pressure-Treated Lumber

Shed's Roof

- Pressure-Treated Lumber
- Pressure-Treated Board
- Plywood
- Building paper
- Asphalt shingles
- Metal drip edge

Shed's Window

- Pressure-Treated Lumber
- Window beading
- Glass

Shed's Window Shutter

• Pressure-Treated Lumber

Shed's Pergola

• Pressure-Treated Lumber

Shed's Door

- Pressure-Treated Lumber
- Wood siding boards
- Plywood

Walls Exterior Siding

- Pressure-Treated Lumber
- Wood siding boards

Top Frame

• Pressure-Treated Lumber

Fasteners & Hardware

- Door hinges
- Door pulls
- Surface bolt
- Window lock
- Wood square louver gable vent
- Galvanized nails
- Wood screws

Drainage System

- Half round gutter
- End pieces with outlet
- 45° elbow
- Drainage pipe
- Joint connector
- End cap
- Round hunger
- Wall fastener

Door Ramp

- Pressure-Treated Lumber
- Plywood


Foundation Preparation


1.1 Clear the area where you want to build the shed and layout for the foundation. Use the below illustration as a guide.

1.2 For the foundation, dig the trenches at least 1 feet wide and 1 feet deep.

1.1 Fill the trenches to ground level with concrete and let cure, or harden. Since curing times vary between brands, read the packaging for recommended curing times.

1.4 Once the concrete has cured, use standard-sized bricks and lay them across the foundation. You will need roughly 170 bricks for this step.

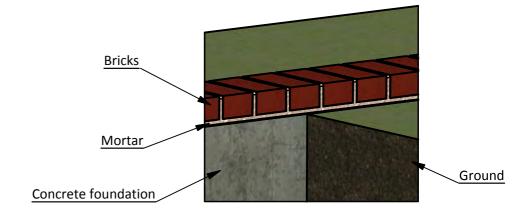

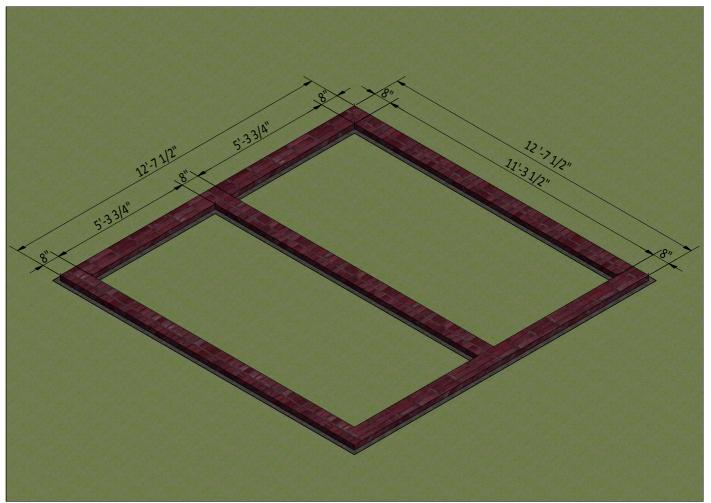


Framing the Floor

2.1 Assemble the frame using $1 \frac{1}{2} \times 7 \frac{1}{4}$ pressure-treated lumber. You will need

nine boards cut to 11'-9" that will be the joist.


2.2 Secure the beams with 8x5" wood screws.

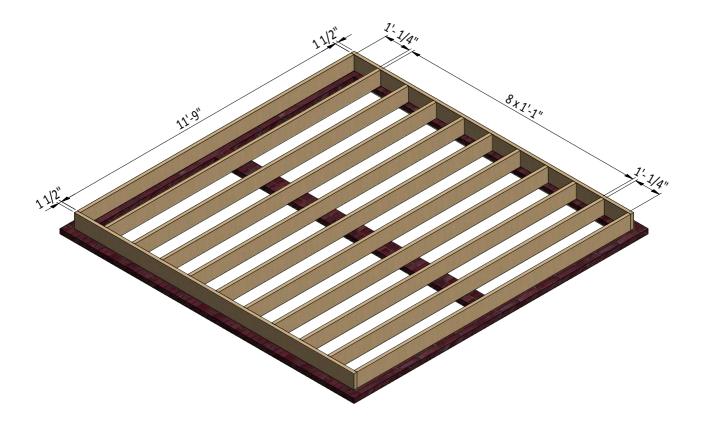

Assemble Front Wall Frame

3.1 Using $1 \frac{1}{2}$ x $3 \frac{1}{2}$ and $3 \frac{1}{2}$ x $3 \frac{1}{2}$ pressure-treated lumber, construct front wall frame using the drawing below as a reference. You will need three boards cut to 11" that will be the cripple studs, one board cut to 5'-4" that will be the door header, ten boards cut to 6'-11" that will be the studs, two boards cut to 3'-4" that will be the bottom plates and one board cut to 12' that will be the top plate.


3.2 Connect the beams with 2x4" wood screws.

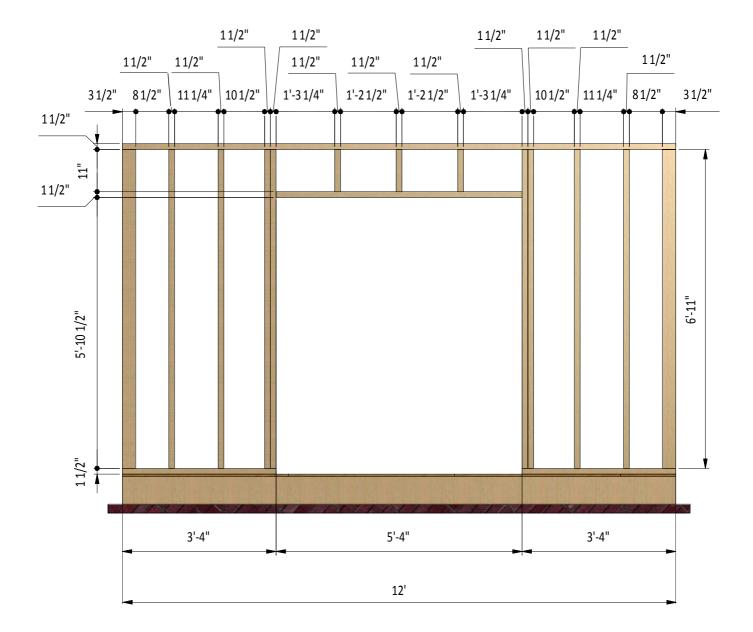

Assemble Back Wall Frame

4.1 Using $1 \frac{1}{2}$ x $3 \frac{1}{2}$ and $3 \frac{1}{2}$ x $3 \frac{1}{2}$ pressure-treated lumber, construct back wall frame using the drawing below as a reference. You will need eleven boards cut to 6'-11" that will be the studs and two boards cut to 12' that will be the top and bottom plates.

4.2 Connect the beams with 2x4" wood screws.

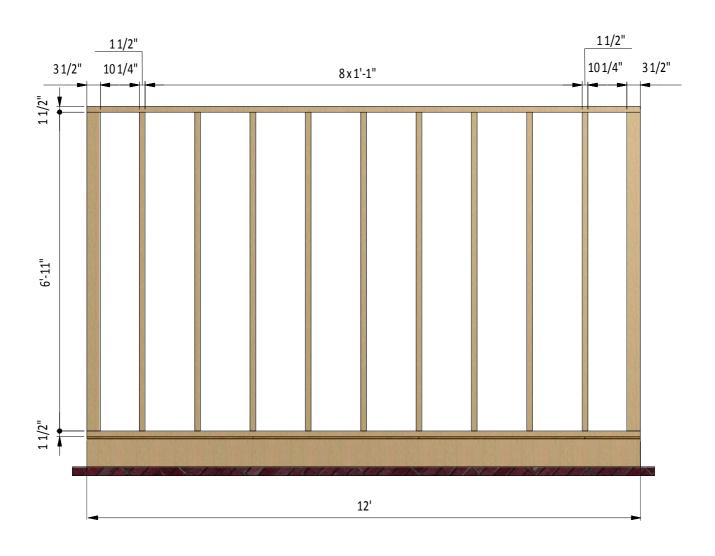


Assemble Left and Right Wall Frames

5.1 Using $1 \frac{1}{2}$ x $3 \frac{1}{2}$ pressure-treated lumber, construct side wall frames using the drawing below as a reference.

You will need four boards cut to 5 1/2" that will be the cripple studs, four boards cut to 2'-10 1/2" that will be the studs, two boards cut to 3'-4" that will be the window header and rough sill, ten boards cut to 6'-11" that will be the studs and two boards cut to 11'-5" that will be the top and bottom plates.

5.2 Connect the beams with 2x4" wood screws.

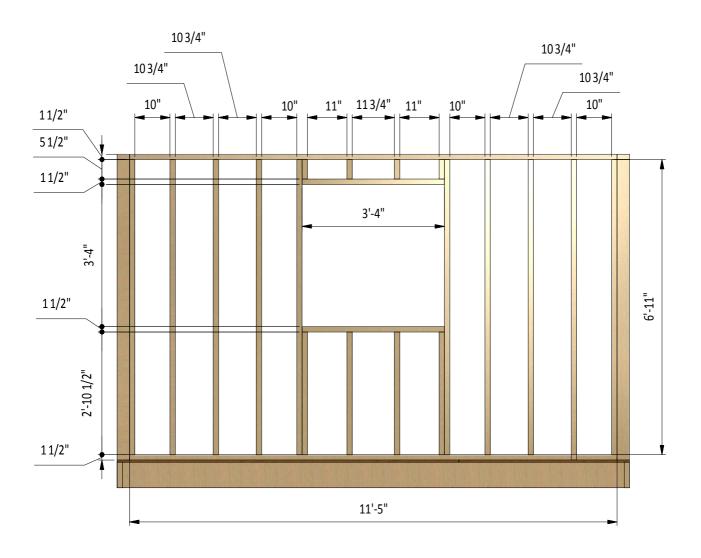


Assemble the Roof Frame

6.1 Using $1 \frac{1}{2}$ " x 5 $\frac{1}{2}$ " pressure-treated lumber, cut twenty two rafters 7'-8 $\frac{1}{2}$ " long according to the dimensions.

6.2 Using $1 \frac{1}{2}$ " x 3 $\frac{1}{2}$ " pressure-treated lumber, cut nine collar ties 5'-11 $\frac{3}{4}$ " long according to the dimensions.

6.3 Using 3/4 " x 7 1/4 " pressure-treated board, cut the ridge board 12' long according to the illustration below.

6.4 Connect the beams with 2x3" wood screws.

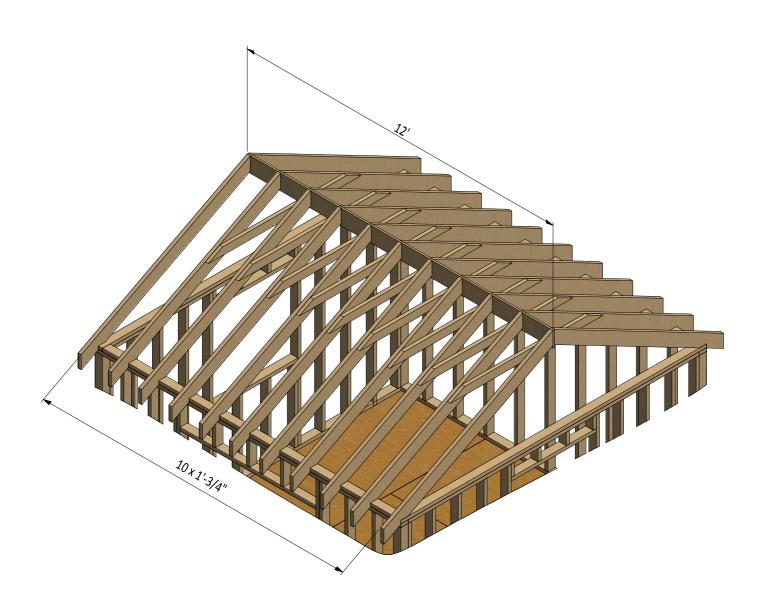

Assemble and Install Shed Doors

7.1 Build the door frames for the shed using $1 \frac{1}{2} x 3 \frac{1}{2}$ pressure-treated lumber and secure with 5" wood screws. You will need two boards cut to 5'-11 $\frac{3}{4}$ " that will be the vertical girts and two boards cut to 2'- $\frac{3}{4}$ " that will be the horizontal girts.

7.2 Prepare the 9/16" plywood sheet with dimensions $2'-7 3/4" \times 5'-11 3/4"$ for the doors according to the drawing.


7.3 Use 2 1/2 " x 3/4 " pressure-treated lumber for the door trim and fasten with 2" wood screws. You will need two boards cut to 2'-2 3/4" and two boards cut to 5'-11 3/4".

7.4 Using 1/4 " x 3/4 " pressure-treated lumber, cut and install a starter course 2'-2 3/4" long.

7.5 For the exterior siding on the door, use 1/2 " x 6" wood siding boards and the illustration below as a reference.


7.6 Assemble siding shields with 2" galvanized nails.

7.7 Install three 3" door hinges using 6x1" wood screws. Finish the doors installation by attaching 4" surface bolts and 6" door pulls.

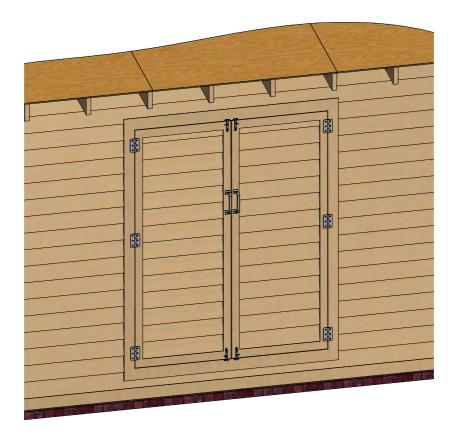

Roof Sheathing Installation

- 8.1 You will need 200 Sq Ft of asphalt shingle roofing.
- **8.2** Add the metal drip edge to the fascias.
- **8.3** Cover the plywood with building paper.
- 8.4 Install asphalt shingle roofing using an industrial stapler.

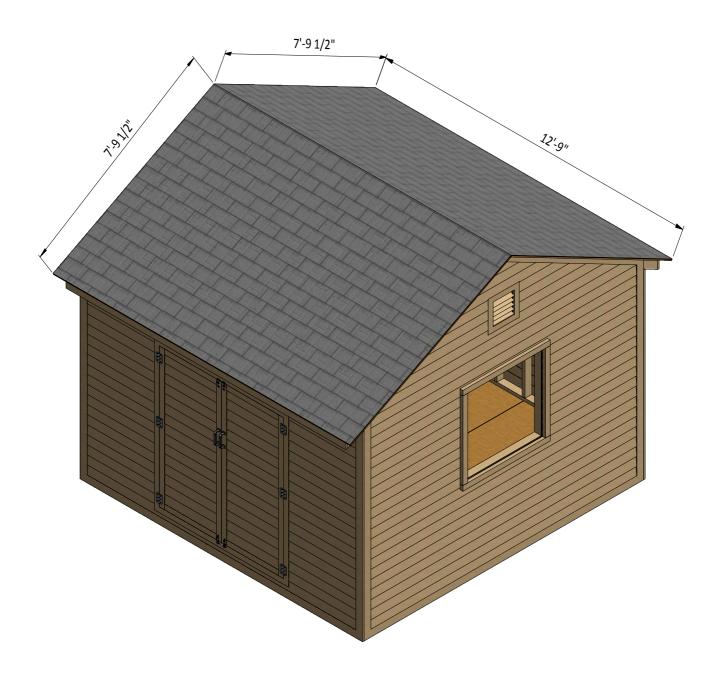

Window Installation for Left and Right Walls

It is necessary to prepare 2 windows.


9.1 Using 1 1/2 " x 2 1/2 " pressure-treated lumber, assemble the outer frame for the window as shown in the drawing below. You will need two boards cut to 3'-1" that will be the vertical girts and two boards cut to 3'-4" that will be the horizontal girts. Additionally, add vertical 2'-11 1/2" long and horizontal 3'-1" long supports using 3/4" x 1" lumber and cut the recesses for the window hinges.

9.2 Use $1 \frac{1}{2}$ x $1 \frac{1}{2}$ pressure-treated material to make the inner frame and secure with 3" wood screws. You will need two boards cut to 2'-9 $\frac{3}{4}$ " that will be the vertical girts and two boards cut to $\frac{3}{-3}\frac{4}{4}$ " that will be the horizontal girts. Mill a recess for the glass panes and for the hinges.

9.3 Use $1 \frac{1}{4} \times 1 \frac{1}{2}$ pressure-treated material to make the inner frame supports and secure with 3" wood screws. You will need two boards cut to 2'-9 $\frac{3}{4}$ " and mill a recess for interconnection.

9.4 Prepare and install glass into inner frame groove and fasten it by window beading from four sides. Use 1/2" galvanized nails.

9.5 Install two hinges (3") with 6x1" wood screws and assemble the window. Install a lock on the inner side of the window.

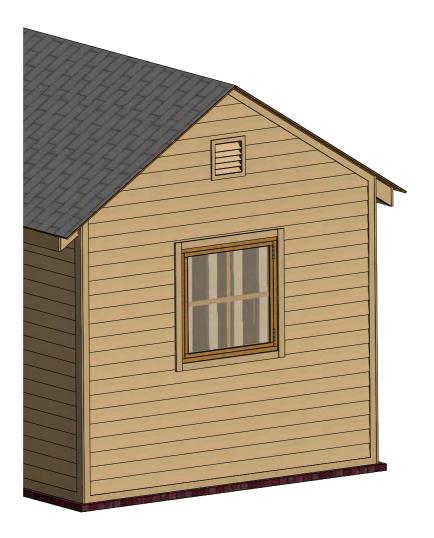

Assemble and Install Window Shutters


It is necessary to prepare 4 windows shutters.

10.1 Assemble frames using 3/4 " x 1 1/2 " pressure-treated lumber and secure with 3" wood screws. You will need one board cut to 1'-4 3/4" two boards cut to 3'-3/4" that will be the vertical girts and two boards cut to 1'-7 3/4" that will be the horizontal girts.

10.2 Mill a recess along the vertical girts for the jalousies.

10.3 Use 1/4 " x 1 1/2 " pressure-treated lumber for the jalousies. You will need twenty two boards cut to 1'-5 3/4".

10.4 Install two 3" door hinges using 6x1" wood screws.

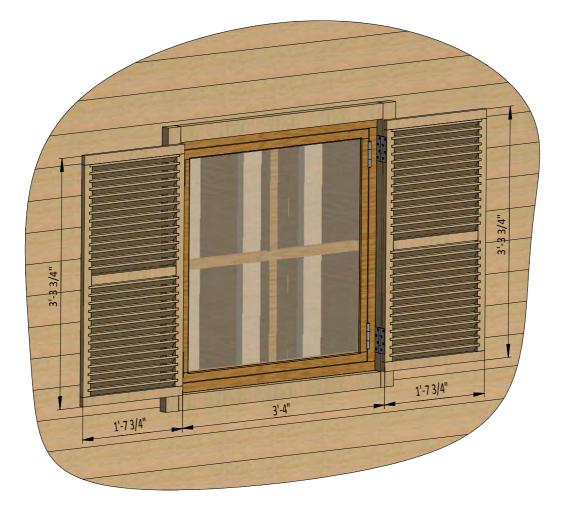

Assemble and Install Decorative Door Shutter

It is necessary to prepare two decorative door shutter.

11.1 Assemble front frame using $1 \frac{1}{2} x 1 \frac{1}{2}$ pressure-treated lumber and secure with 3" wood screws. You will need two boards cut to 6'-7" that will be the vertical girts and two boards cut to 1'-5 $\frac{1}{2}$ " that will be the horizontal girts.

11.2 Assemble back frame using 3/4 " x 2 1/2 " pressure-treated lumber and secure with 5" wood screws. You will need two boards cut to 6'-7" that will be the vertical girts and two boards cut to 1'-3 1/2" that will be the horizontal girts.

11.3 Use 3/4 " x 3/4 " pressure-treated lumber for the lattice. You will need thirty six boards cut to 2'-3/4". Assemble according to the drawing.



Assemble and Install Roof Drainage System

12.1 Assemble roof drainage system on the front fascia board. You will need 5" half round gutter 10' long, two end pieces with the outlet, six 45° elbows, two 3" pipes 6' long, two joint connectors and two end caps.

12.2 Fasten the round gutter to the fascia with the round hungers.

12.3 Fasten the vertical pipe section with the four wall fasteners.




Assemble and Install Door Ramp

13.1 Assemble five door ramp frames from pressure-treated lumber and secure with 3 and 5" wood screws. For each frame you will need one $1 \frac{1}{2} \times 1 \frac{1}{2}$ board cut to 1'-8"; one $1 \frac{1}{2} \times 2 \frac{1}{2}$ " board cut to 3'-3/4" and one $1 \frac{1}{2} \times 3 \frac{1}{2}$ " board cut to $6 \frac{1}{4}$ ".

13.2 Connect and secure all frames using one 1 1/2" x 2 1/2" board 5'-9" long and 3" wood screws.

13.3 Cut the 9/16" plywood sheet with dimensions $3'-3/4" \times 5'-9"$ for the top plane and two sheets with dimensions $9 \cdot 1/4" \times 2'-9 \cdot 1/2"$ for the sides.

13.4 Assemble siding shields with 2" galvanized nails.

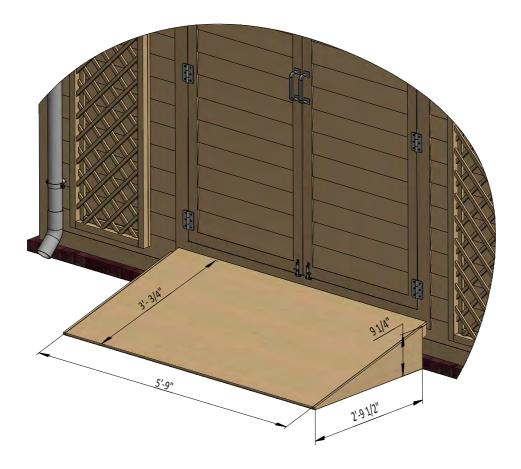

Shed Decoration

Now that your coop is all done, you are ready to decorate it any way you want using your favorite

paint, stain, or preservative.



Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our premium edition:

Steps count14Illustrations for Each StepImage: Comparison of the state	um edition
Print ReadyImage: Construction of the second of	28
Step By Step Instructions Image: Control of the second	0
Full Materials and Cuttings List Image: Constraint of the second of th	\bigcirc
Additional Illustrations Image: Control of the second se	I
Additional Blueprints	
	\bigcirc
	\bigcirc
Tools List	\bigcirc
Fastening Elements List	\bigcirc
Technical Support	\bigcirc

BUY NOW



For more great HOW-TO plans please visit: https://shedplans.org

Copyright

The text and illustrations that appear here are the exclusive property of shedplans.org and are protected by federal copyright laws. The duplication, sale or distribution of any portion of these plans without prior written consent from the original designer will be subject to the appropriate penalties for copyright infringement. Sharing this plan on the web is only permited with an indicated original source: https://shedplans.org