



6'x10' Storage Shed Plan

Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our premium edition:

Features	Free plan	Premium edition
Steps count	13	27
Illustrations for Each Step	O	O
Print Ready	S	\bigcirc
Step By Step Instructions	0	O
Full Materials and Cuttings List	\otimes	S
Additional Illustrations	\otimes	S
Additional Blueprints	\otimes	\bigcirc
Tools List	8	S
Fastening Elements List	8	\bigcirc
Technical Support	\otimes	S

BUY NOW

6'x10' storage shed material list

Site Preparation

- Concrete
- Bricks

Bottom Frame

- Pressure-Treated Lumber
- Plywood

Walls Frames

• Pressure-Treated Lumber

Shed's Roof

- Pressure-Treated Lumber
- Pressure-Treated Board
- Plywood
- Building paper
- Asphalt shingles
- Metal drip edge

Front/Side Shed's Window

- Pressure-Treated Lumber
- Window beading
- Glass

Walls Exterior Siding

- Pressure-Treated Lumber
- Wood siding boards

Top Frame

• Pressure-Treated Lumber


Fasteners & Hardware


- Corner braces
- Galvanized nails
- Wood screws

Foundation Preparation

1.1 Fill the trenches to ground level with concrete and let cure, or harden. Since curing times vary between brands, read the packaging for recommended curing times.

1.2 Once the concrete has cured, use standard-sized bricks and lay them across the foundation. You will need roughly 132 bricks for this step.

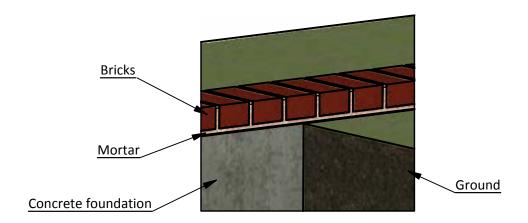


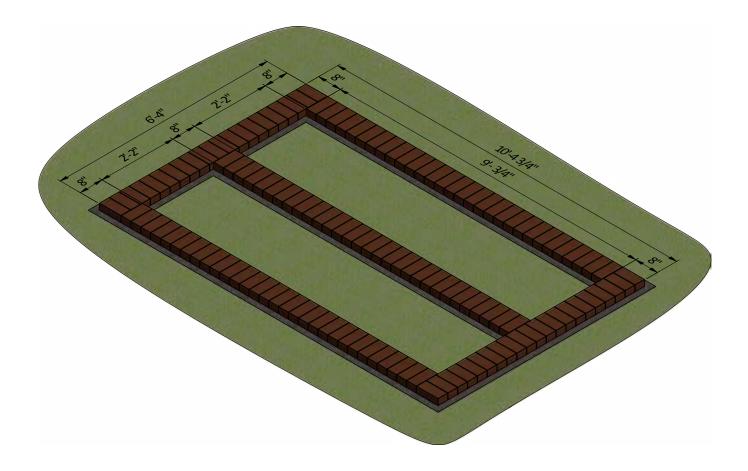

Framing the Floor

2.1 Assemble the frame using $1 \frac{1}{2} \times 7 \frac{1}{4}$ pressure-treated lumber. You will need seven boards cut to 5'-6 $\frac{1}{4}$ that will be the joist.


2.2 Secure the beams with 8x3" wood screws.

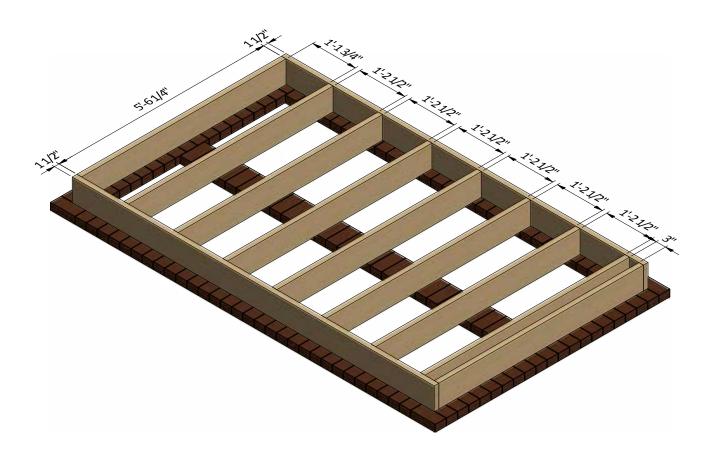

Install the Plywood Floor

3.1 Prepare the 5/8" plywood for the floor sheathing according to the drawing. You will need one 4' x 8' sheet, one 1'-9 1/4" x 8' sheet and one 1'-9 1/4" x 5'-9 1/4" sheet.


3.2 Secure the plywood with 2" wood screws.

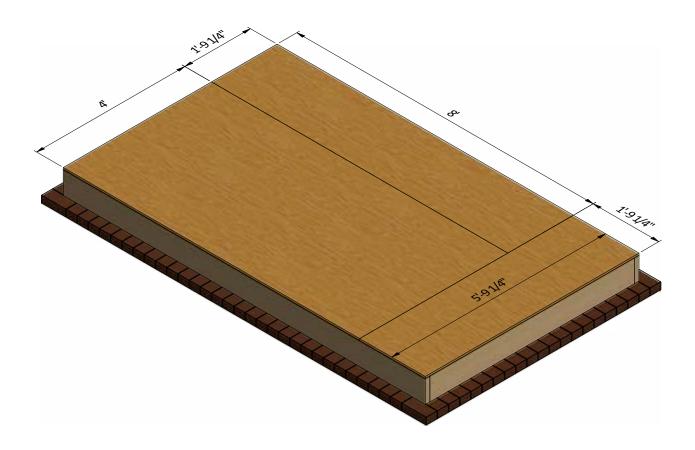

Assemble Front Wall Frame

4.1 Using 1 1/2" x 3 1/2", 1 1/2" x 5 1/2" and 3 1/2" x 3 1/2" pressure-treated lumber, construct front wall frame using the drawing below as a reference. You will need eight boards cut to 6'-11", two boards cut to 5'-10 1/2" that will be studs, one board cut to 1'-3 1/2" and one board cut to 5'-10" that will be the bottom plates, one board cut to 9'-9 1/4" that will be the top plate, two boards cut to 2'-11" that will be the door header and three boards cut to 7" that will be cripple studs.


4.2 Connect the beams with 2x3" and 2x5"wood screws.

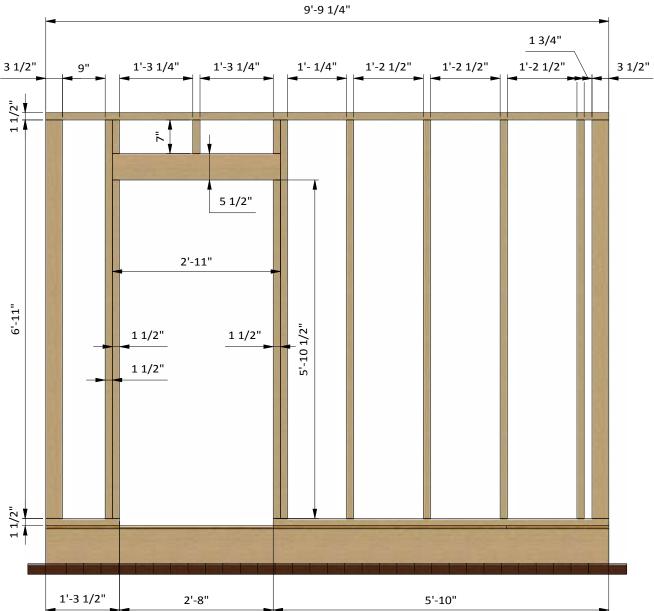

Assemble Back Wall Frame

5.1 Using 1 1/2" x 3 1/2" and 3 1/2" x 3 1/2" pressure-treated lumber, construct back wall frame using the drawing below as a reference. You will need nine boards cut to 6'-11" that will be the studs and two boards cut to 9'-9 1/4" that will be the top and bottom plates.


5.2 Connect the beams with 2x3" wood screws.

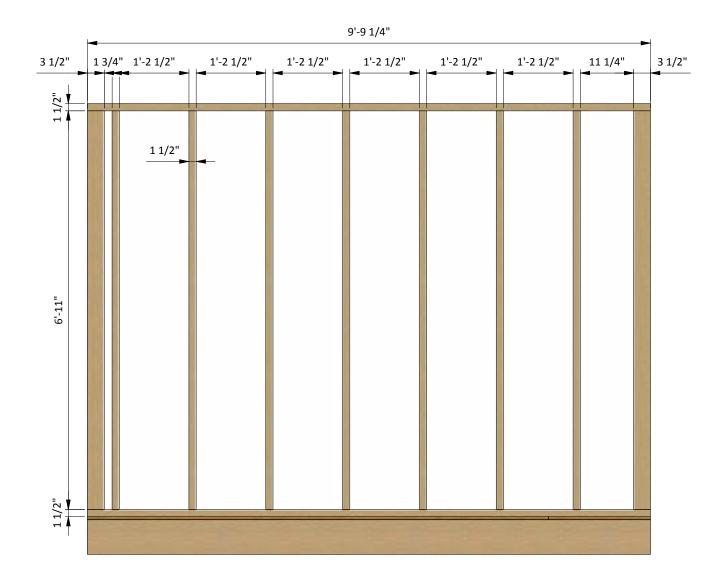

Assemble Side Wall Frames

6.1 Using 1 1/2" x 3 1/2" pressure-treated lumber, construct right and left wall frames using the drawing below as a reference. You will need five boards cut to 6'-11" that will be the studs and two boards cut to 5'-2 1/4" that will be the top and bottom plates.

6.2 Connect the beams with 2x3" wood screws.

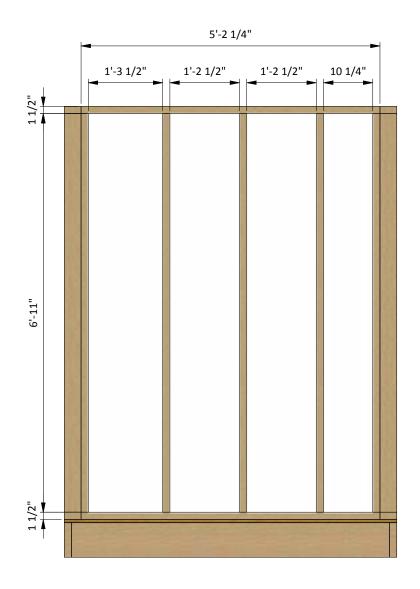


Assemble the Roof Frame

7.1 Using 1 1/2" x 5 1/2" pressure-treated lumber, cut eighteen rafters 4'-7 1/4" long according to the dimensions in drawings below.

7.2 Using $1 \frac{1}{2} \times 3 \frac{1}{2}$ pressure-treated lumber, cut nine collar ties $3'-\frac{1}{4}''$ long according to the dimensions in drawings below.

7.3 Using $1 \frac{1}{2} \times 5 \frac{1}{2}$ pressure-treated board, cut one board $10 \frac{3}{4}$ long, cut one board 6" long and six boards cut to $1-2 \frac{1}{2}$ long that will be ridge boards according the illustration below.

7.4 Connect the beams with 3"and 5" wood screws.

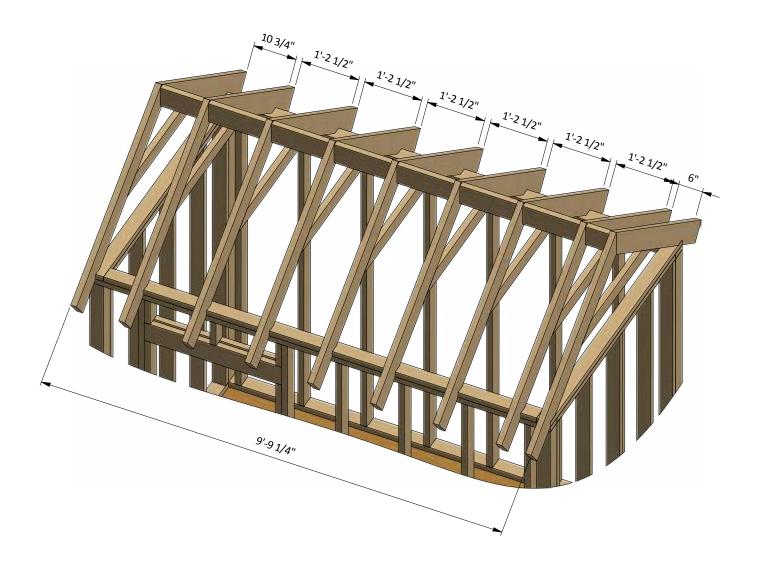

Install Plywood for the Roof

8.1 Cut sheets of 5/8" plywood for the roof sheathing using the drawing below as a guide. You will need two 4' x 8' sheets, two 10 1/4" x 8' sheets and two 2'-3 1/4" x 4'-10 1/4" sheets.

8.2 Secure the plywood with 2" wood screws.



Assemble and Install Shed Door

9.1 Build the door frame for the shed using $1 \frac{1}{2} \times 3 \frac{1}{2}$ pressure-treated lumber and secure with 5" wood screws. You will need two boards cut to 5'-11 $\frac{1}{2}$ that will be the vertical girts, three boards cut to 2'-1/2" that will be the horizontal girts and two boards cut to 3'-3" that will be cross braces.


9.2 Prepare the 5/8" plywood sheet with dimensions $2'-7 1/2" \times 5'-11 1/2"$ for the doors according to the drawing.

9.3 Use 3/4" x 2 1/2" pressure-treated lumber for the door trim and fasten with 1" wood screws. You will need two boards cut to 5'-11 1/2" and two boards cut to 2'-2 1/2".

9.4 Using 1/4" x 3/4" pressure-treated lumber, cut and install a starter course 2'-2 1/2" long using (node D on page page 29) as a reference.

9.5 For the exterior siding on the door, use 1/2" x 6" wood siding boards and the illustration below as a reference. Assemble siding shields with 2" galvanized nails.

9.6 Install two 4" door hinges using 6x1" wood screws. Finish the doors installation by attaching 4" surface bolts and 6" door pulls (see nodes **C**, **B**.

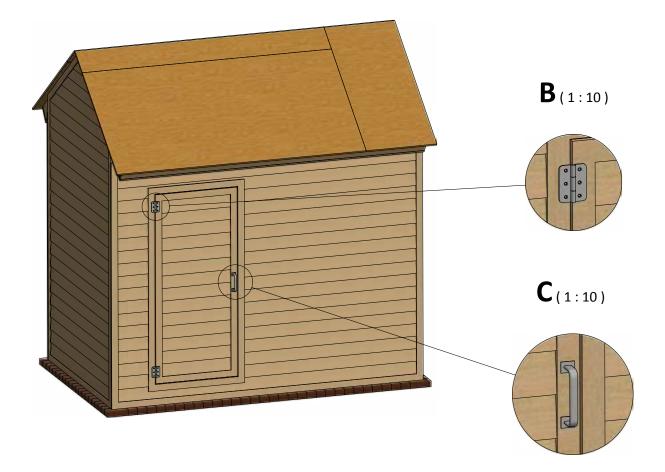

Roof Sheathing Installation

10.1 Prepare metal drip edge with 6" width. You will need 42' to cover all the perimeter.

10.2 Place the drip edge down, aligning it to the plywood edge. Use 2" nails to secure the first drip edge. When you place the next drip edge piece, it should overlap the first by an inch.




Roof Sheathing Installation

11.1 You will need 102 Sq Ft of building paper and asphalt shingle roofing.

11.2 Cover the plywood and drip edge with building paper. Try to install sheets with 1" overlapping. Use 2" nails to secure the sheets.


11.3 Install asphalt shingle roofing using an industrial stapler.

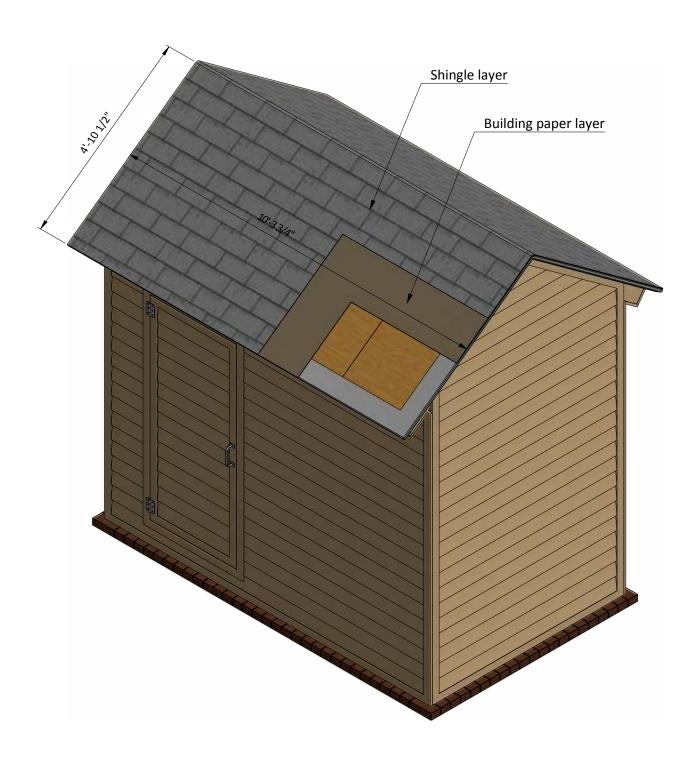

Assemble and Install Door Ramp

12.1 Using 3/4" x 3 1/2", 3/4" x 5", 1 1/2" x 3 1/2" and 1 1/2" x 7 1/4" pressure-treated lumber, construct door ramp using the drawing below as a reference. You will need three boards cut to 2'-9 1/2" that will be support girts, two boards cut to 1'-2 1/2" that will be joists (cut the top edge to fit the angle of support girts, one board cut to 2'-9 1/2" that will be rim joist and ten boards cut to 2'-9 1/2" that will be top sheathing.

12.2 Assemble siding shields with 2" and 3" galvanized nails.

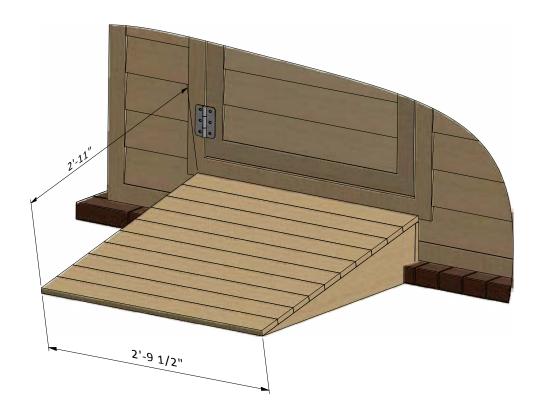



Thank You

Now that your shed is all done, you are ready to decorate it any way you want using your favorite paint, stain, or preservative.



Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our premium edition:

Features	Free plan	Premium edition
Steps count	13	27
Illustrations for Each Step	O	O
Print Ready	S	\bigcirc
Step By Step Instructions	0	O
Full Materials and Cuttings List	\otimes	S
Additional Illustrations	\otimes	S
Additional Blueprints	\otimes	\bigcirc
Tools List	8	S
Fastening Elements List	8	\bigcirc
Technical Support	\otimes	S

BUY NOW



For more great HOW-TO plans please visit: https://shedplans.org

Copyright

The text and illustrations that appear here are the exclusive property of shedplans.org and are protected by federal copyright laws. The duplication, sale or distribution of any portion of these plans without prior written consent from the original designer will be subject to the appropriate penalties for copyright infringement. Sharing this plan on the web is only permited with an indicated original source: https://shedplans.org